




X-99 Trimguide

Decklayout on DEN-598

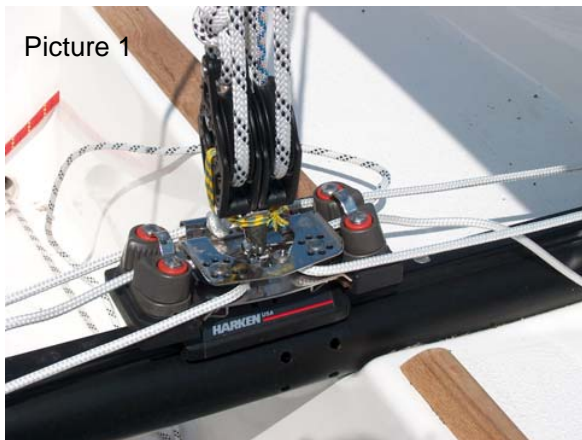

Picture 1




Picture 2



Picture 3



Picture 4

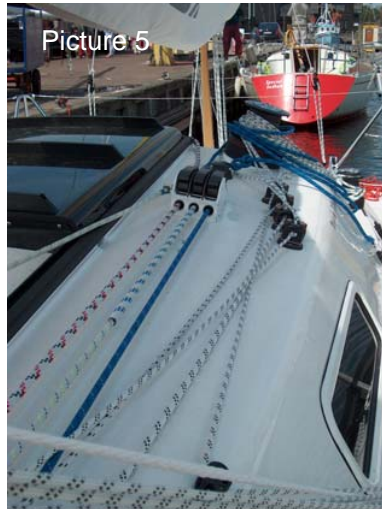

Picture 5



Picture 6



Picture 7

- Picture 1** Main traveller from Harken with automatic release on leeward traveller
- Picture 2** Blocks for genna sheet is tied on the instead of using sjakels
- Picture 3** All blocks are tied with spectra rope instead of using shackles to reduce weight and increase flexibility
- Picture 4+5** Deck layout
- Picture 6** Special turnbuckles to ease trimming
- Picture 7** Spinnaker bag system, which makes it possible to move the bag forward in the cabin when not using the spinnaker



X-99 Trimguide


Trim of mast



NORTH SAILS
One-Design

Mastrake

1. Take off your forestay
2. Bring it to the front of your mast
3. Mark the forestay just under the black mark.
4. Put the forestay back in its original place.
5. Measure from the black mark on your forestay to the centre of the pin-bolt when put back on its place
6. The length should be adjusted to the actual wind speed according to below table

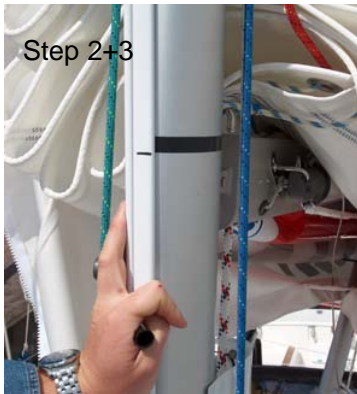

Step 6

Wind (TWS)	Measurement
0-10 knt	225 cm
8-16 knt	226-227 cm
14-26	228 cm

Mast step

1. Measure from aft bulk head to back end mast step. (28-36mm)
2. Centre your mast at deck level according to your shroud position
3. Measure your J-measurement (forestay position at deck level to front of mast at deck level). This measurement should be 3450 mm. Maximum J-measurement according to class rules.

